


# CAPSULE SEAT & DIAPHRAGM REPLACEMENT INSTRUCTIONS

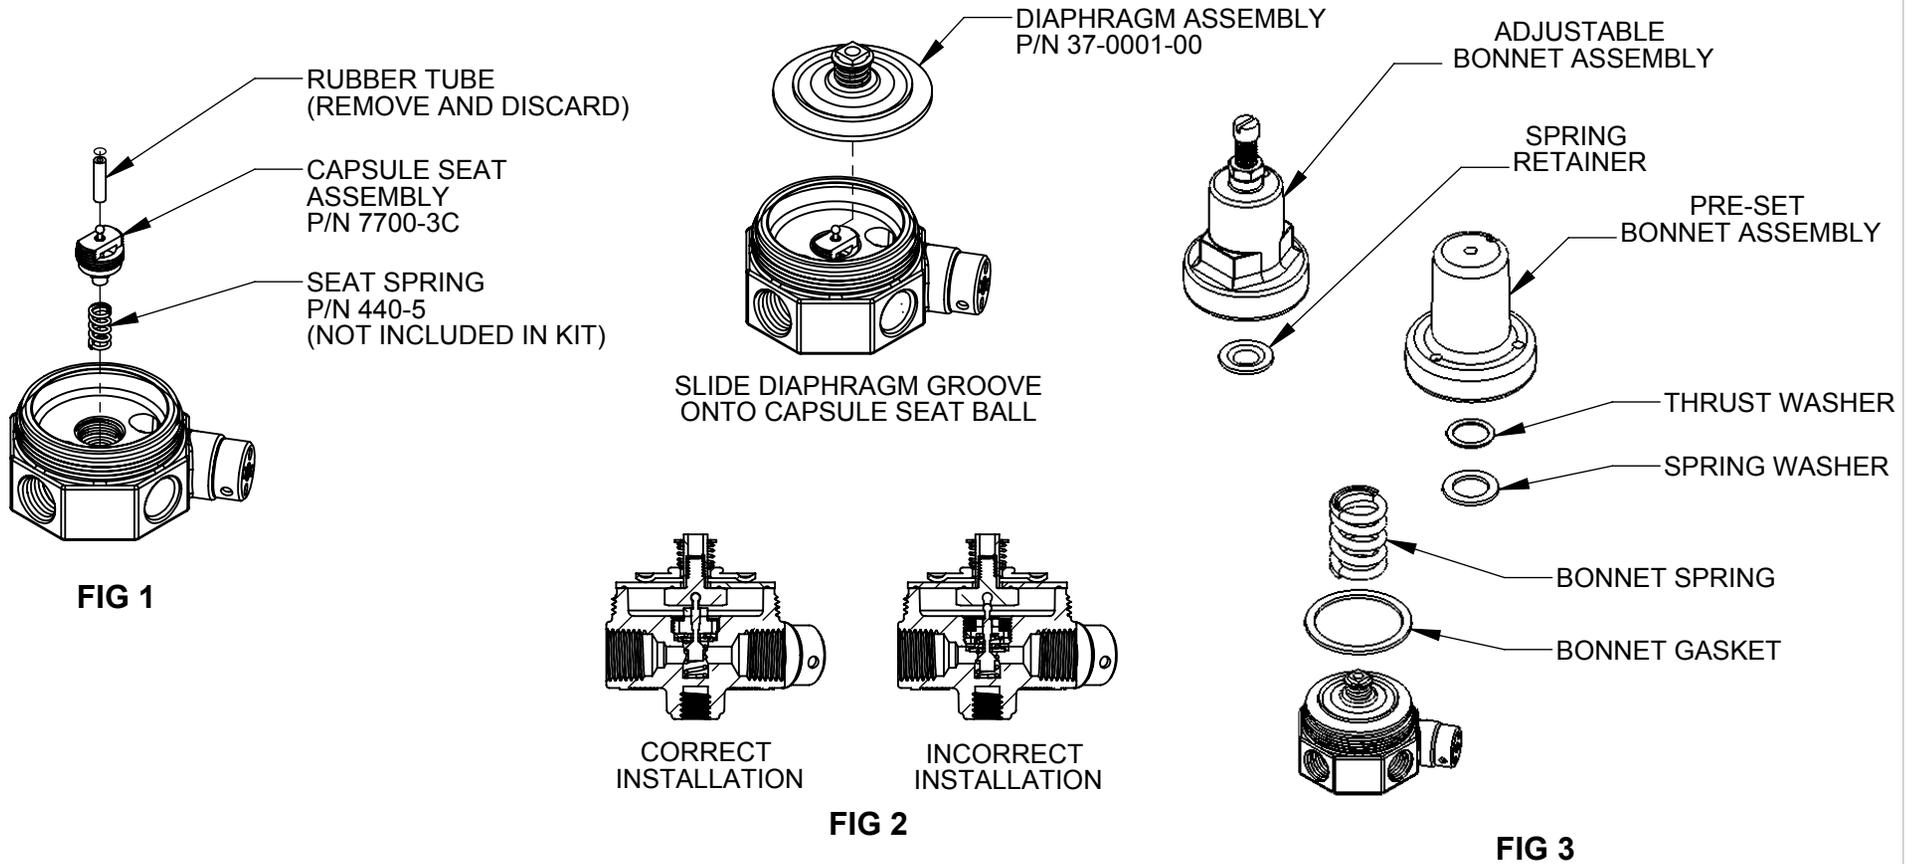

- BACK BONNET ADJUSTING SCREW OUT AS FAR AS IT WILL GO. REMOVE THE BONNET ASSEMBLY AND ITS COMPONENTS AND SET ASIDE.
- SLIDE DIAPHRAGM ASSEMBLY OFF OF SEAT ASSEMBLY AND DISCARD.
- UNSCREW CAPSULE SEAT ASSEMBLY FROM REGULATOR BODY AND DISCARD. BE SURE TO KEEP THE SEAT SPRING.
- SCREW THE NEW CAPSULE SEAT ASSEMBLY INTO THE BODY, MAKING SURE THAT THE SEAT SPRING IS IN PLACE AS SHOWN IN FIG 1.
- TIGHTEN THE CAPSULE SEAT ASSEMBLY FIRMLY USING A 6" PARALLEL PLIERS OR TAPRITE TOOL NO 440-4PN. IF CAPSULE SEAT ASSEMBLY IS NOT TIGHTENED PROPERLY LEAKS MAY OCCUR.
- REMOVE RUBBER TUBE FROM SEAT ASSEMBLY AND DISCARD.
- SLIDE GROOVE OF DIAPHRAGM ASSEMBLY NUT ONTO CAPSULE SEAT AS SHOWN IN FIG 2.  
**DO NOT SET DIAPHRAGM ASSEMBLY ON TOP OF BALL.**
- DEPENDING ON BONNET TYPE, REPLACE BONNET ASSEMBLY AND COMPONENTS AS SHOWN IN FIG 3. USE A WRENCH TO TIGHTEN BONNET FIRMLY.
- TEST REGULATOR FOR LEAKS BEFORE INSTALLING IN SYSTEM.