

## ZINC BONNET REPLACEMENT INSTRUCTIONS (DISASSEMBLY)

A 1-5/8"or adjustable wrench is required to remove the Poly bonnet.

PARTS SHIPPED IN THIS KIT (43-0177-00): ASSEMBLE AS SHOWN

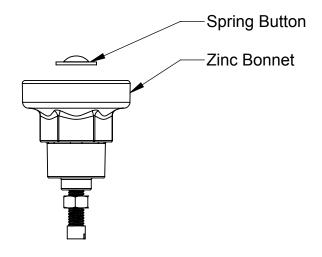

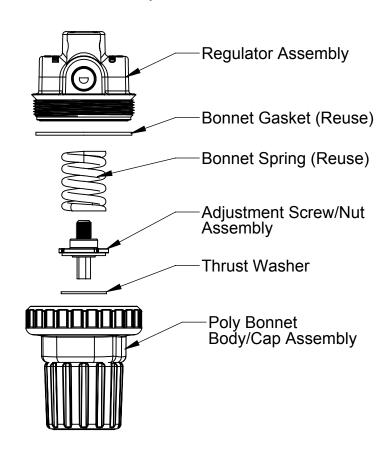

- Unscrew (counter clockwise) Poly bonnet off Regulator body. STEP 1.
- STEP 2. Remove Poly bonnet and adjust screw from assembly. Bonnet spring and bonnet gasket will be reused

INSTRUCTION SHEET NO. 42-0004-00 REV. A DATED: 09/2017

